




Donaldson.
FILTRATION SOLUTIONS

Installation and Operation Manual

Installation, Operation and Maintenance Manual

DFPRE4, DFPRE6, DFPRE9, DFPRE12

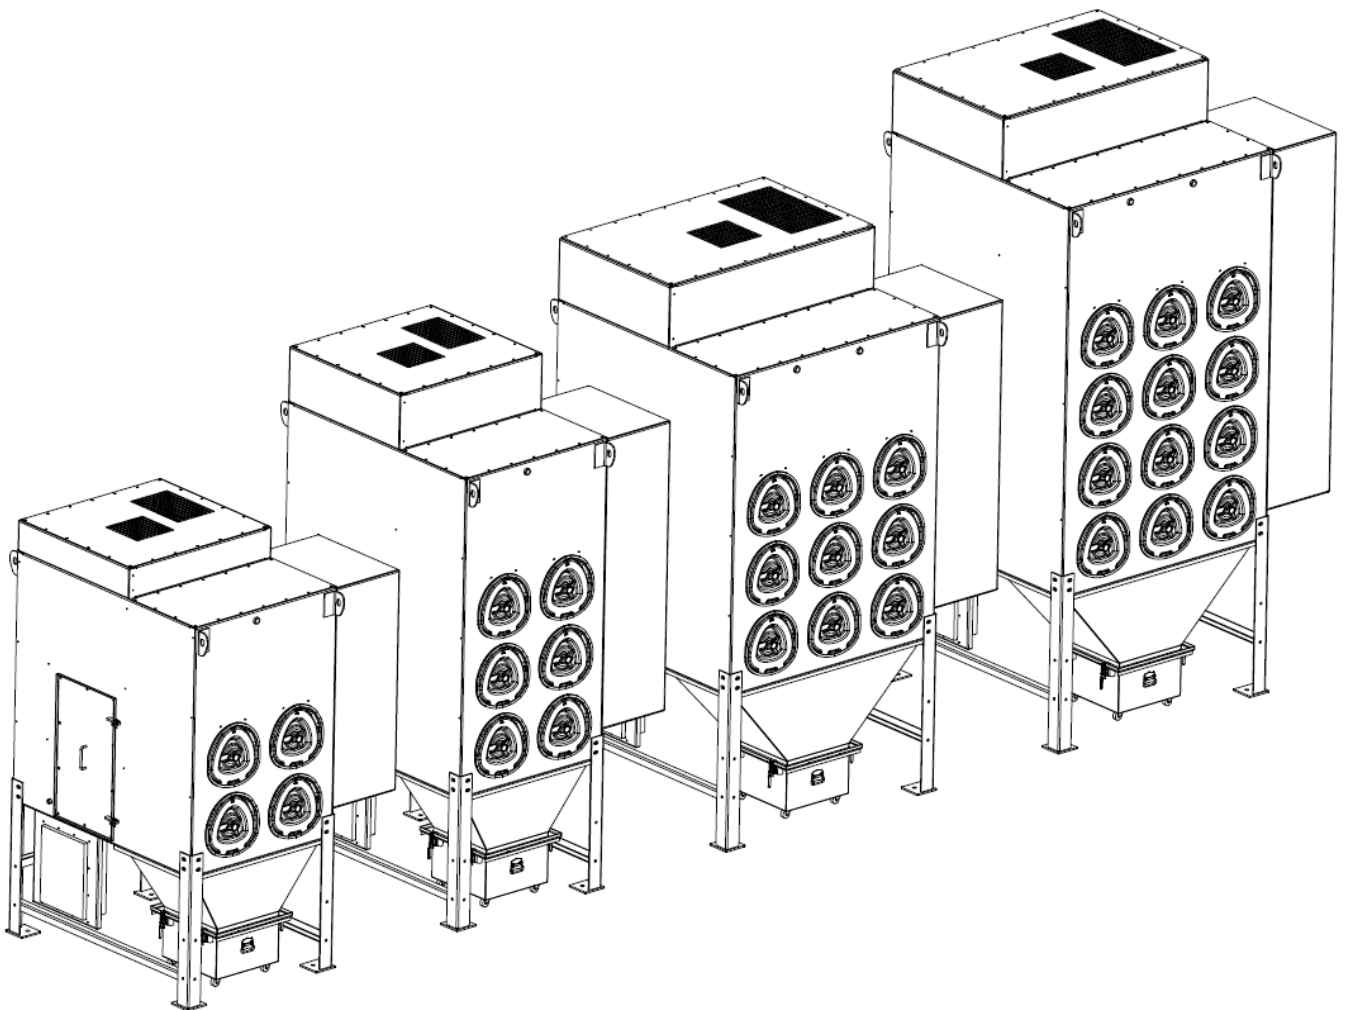

Throughout this manual statements indicating precautions necessary to avoid equipment failure are referenced in a **Note**. Statements indicating potential hazards that could result in personal injury or property damage are referenced in a **CAUTION!** box.

Donaldson Company reserves the right to change design and specifications without prior notice.

Illustrations are for reference only as actual product may vary.

IOM AK03085-01

Revision 0



CAUTION!

Application of Dust Control Equipment

- Combustible materials such as buffing lint, paper, wood, aluminum or steel dust, weld fume, or flammable solvents represent fire or explosion hazards. Use special care when selecting and operating all dust or fume collection equipment when combustible materials are present to protect workers and property from damage due to fire and/or explosion. Consult and comply with National and Local Codes relating to fire or explosion and all other appropriate codes when determining the location and operation of dust or fume collection equipment.
- When combustible materials are present, consult with an installer of fire extinguishing systems familiar with these types of fire hazards and local fire codes for recommendations and installation of fire extinguishing and explosion protection systems. Donaldson Torit dust collection equipment is not equipped with fire extinguishing or explosion protection systems.
- DO NOT allow sparks, cigarettes or other burning objects to enter the hood or duct of any dust or fume control equipment as these may initiate a fire or explosion.
- For optimum collector performance, use only Donaldson Torit replacement parts.

Warning – Improper operation of a dust control system may contribute to conditions in the work area or facility that could result in severe personal injury and product or property damage. Check that all collection equipment is properly selected and sized for the intended use.

Table of contents

| | |
|----------------------------------|----|
| 1.0 Product Introduction | 6 |
| 2.0 Installation | 6 |
| 3.0 Start up and Operation | 7 |
| 4.0 Service | 8 |
| 5.0 Trouble Shooting | 9 |
| 6.0 Control Panel | 11 |
| 7.0 Spare Parts | 15 |

List of figures

| |
|---|
| Figure 1: Schematic |
| Figure 2: Operational Schematic |
| Figure 3: Inlet Schematic |
| Figure 4: Dust Removal for Dust Disposal System |
| Figure 5: Control panel |
| Figure 6: Electrical Terminal Block |
| Figure 7: Wiring Diagram |



This manual contains specific precautionary statements relative to worker safety. Read thoroughly and comply as directed. Discuss the use and application of this equipment with a Donaldson Torit representative. Instruct all personnel on safe use and maintenance procedures.

Data Sheet

Model Number _____ Serial Number _____

Ship Date _____ Installation Date _____


Customer Name _____

Address _____


Filter Type _____

Accessories _____

Other _____

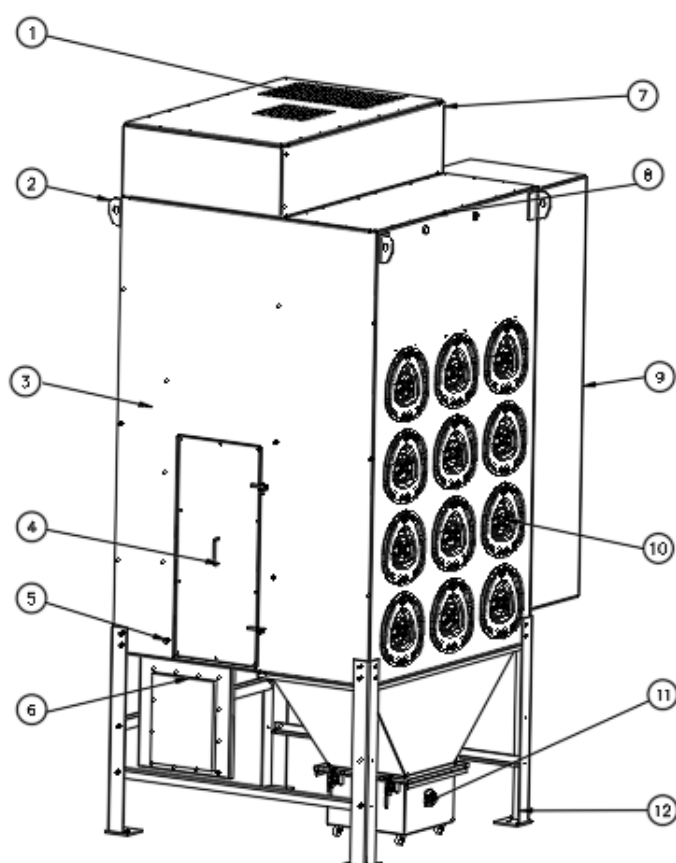


- 1. Air outlet
- 2. Lift lug
- 3. Cabinet
- 4. CAP access door
- 5. Compressed air inlet
- 6. Control box
- 7. Fan cabinet

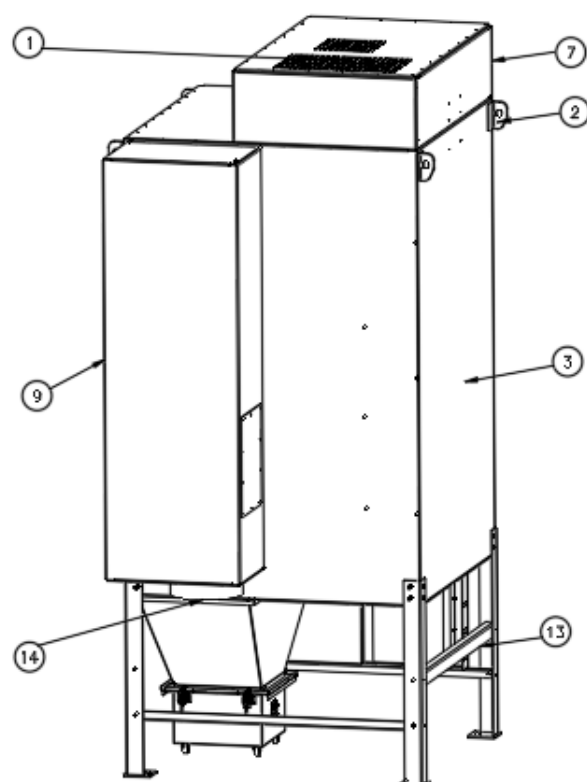

- 8. Roof panel
- 9. Spark trap
- 10. Access cover
- 11. Dust bin
- 12. Leg
- 13. Leg stiffener
- 14. Air inlet

Figure 1 Schematic

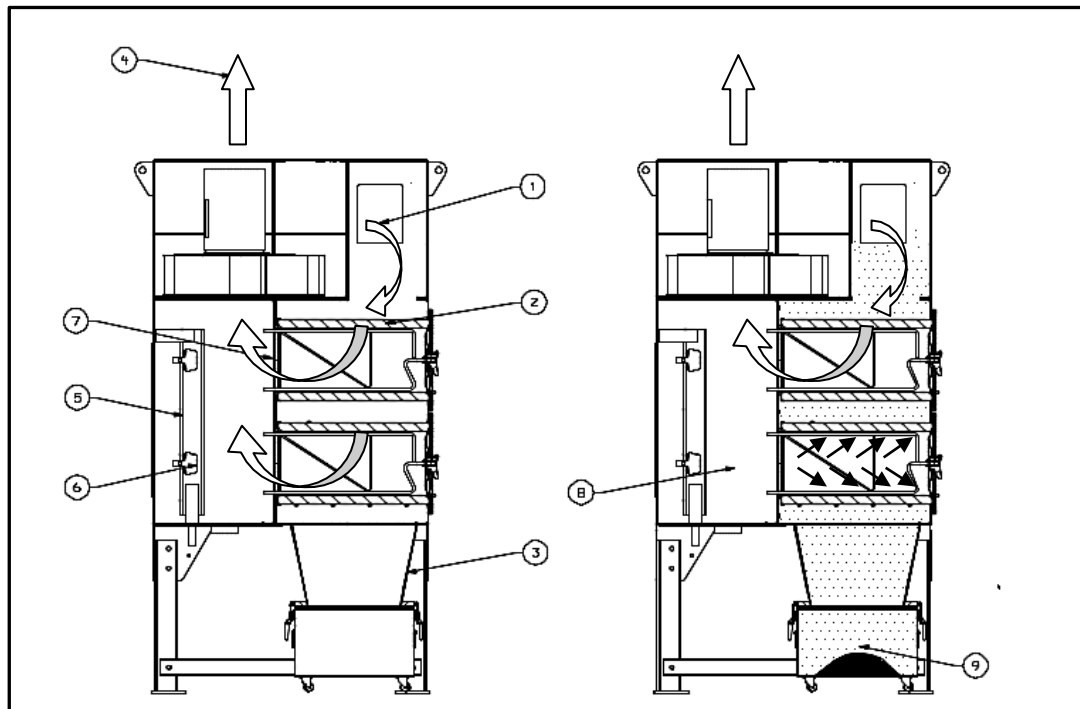

| Operation | | Filter element cleaning |
|--------------------|---|-------------------------|
| 1. Dirty air inlet | 4. Clean air outlet | 7. Tube sheet |
| 2. Filter element | 5. Manifold | 8. Air pulse |
| 3. Hopper | 6. Diaphragm valve with built on solenoid valve | 9. Dust (falling) |

Figure 2
Operational Schematic

1.0 Product Introduction

The dust collector is used for the collection of airborne dust and particulate. Whether in answer to the problem of air pollution, or as part of a manufacturing process, the dust collector provides highly efficient and continuous on-line dust collection.

The filter elements are the heart of the dust collector. These filter elements help ensure the only cleaned air is returned to the plant environment.

During operation, contaminated air enters the dust collector through the dirty air inlet area and passes through the filter elements. Dust is collected on the surface of the filter elements. The filtered air flows through the center of the filter elements into the clean air chamber, where it exhausts through the clean air outlet re-circulated into the environment.

To ensure the optimal performance of your dust collector it is necessary that the filter elements are cleaned automatically sequentially. During the filter sequence, the timer energizes a solenoid valve, causing the corresponding diaphragm valve to send a pulse of compressed air through the filter elements (from the inside outwards), removing the collected dust from the outside surface of the filter elements. The dust falls through the hopper into the dust disposal system.

2.0 Installation

Ensure all persons carrying out work on the supplied equipment follow any relevant recognized standards or codes and are competent to do so.

2.1 Compressed Air Connection

Compressed air pressure must be at 6 bar.

Be sure that all compressed air components are adequately sized to meet the maximum system requirements of 45 Nliters per pulse at 6 bar supply pressure (= design pressure).

Compressed air supply has to be both oil and moisture free.

Connect the compressed air supply line to the compressed air connection of the dust collector.

A compressed air shut-off valve, a filter/water separator with automatic condensate drain, a pressure regulator with gage must be installed on the compressed air supply line.

2.2 Electrical Connection

Enter the cable through the cable gland located at the lower right corner of the collector. And enter the cable to the control box through the cable gland located at the bottom of the enclosure. Please follow the electrical diagram provided for connection.

Do not install in classified hazardous atmospheres without an enclosure rated for the application.

2.3 Inlet Duct Connection

The inlet collar is integrated with the unit, it is shown on figure 3.

3.0 Start-up and Operation

Check that the outlet of the fan is free of debris before starting.

Make sure the dust disposal system is properly installed under the hopper.

With new filter elements the airflow should be adjusted to the nominal value by closing the damper valve.

Check if the access doors are closed.

Switch main power on and press switch 'start'.

Adjust the damper to the desired airflow.

Turn on the compressed air supply. Adjust to 6 bar of pressure with the compressed air regular.

The cleaning cycle only starts when necessary. For customized setting see the controls manual.

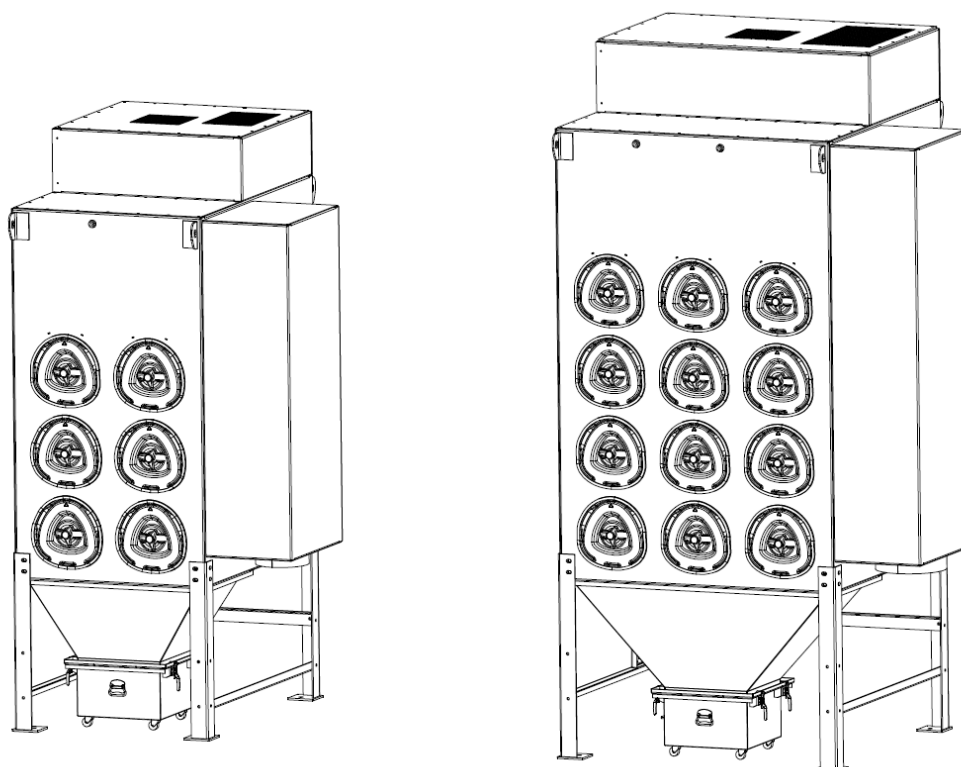


Figure 3
Inlet Schematic

4.0 Service

Caution

Disconnect electrical power before servicing.

Shut off and bleed compressed air supply before servicing any compressed air components.

The filter elements are cleaned automatically and sequentially. Don't move out the filter elements and clean.

4.1 Dust Removal

Do not let the dustbin overfill. It can cause poor dust collector performance.

Turn off the dust collector and empty the dustbin on a regular base (recommend to empty the dustbin when 1/2 full).

For the spark trap: do not forget to empty it. Use a vacuum cleaner through the access cover on the spark trap.

4.2 Replacing of Filter Elements

Caution:

When the airflow is low or the differential pressure is too high and alarm, must change the filter elements. After operating more than 2000—4000 hours continuously, must change the filter elements.

All filter elements should be changed at the same time.

Do not drop the new filter element on the floor or any other hard surface. It is necessary to clean the dust of the tube sheet all around the opening to ensure a positive seal of the gasket.

Slide the new filter element along the yoke with the gasket end facing inward towards the clean air chamber.

Reinstall the cover and screw the wing nut clockwise onto the yoke. Tighten securely, to prevent leakage

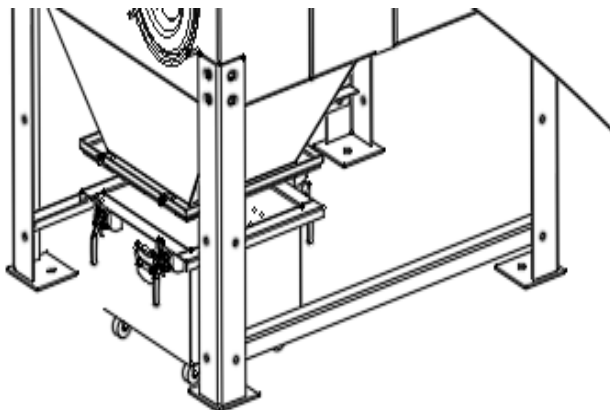



Figure 4
Dust Removal for Dust
Disposal System

5.0 Trouble shooting



WARNING

- Disconnect all power before servicing to prevent injury or extensive damage.
- Direct compressed air supply towards human body or equipment will cause serious injury, shut off and bleed compressed air supply before servicing any compressed air components.
- Automatically cut off system power indicates abnormal function of electrical components. Requires a qualified electrician according to local codes to check all electrical work.

| Problem | Probable Cause | Remedy |
|---|---|---|
| Fan does not start | Not wired correctly. | Check and correct internal motor wiring for proper connections for your voltage (see Wiring Diagram) |
| | Proper wire size not used for motor | Rewire per national and local electric codes for proper wire size. |
| Fan set starts, but does not keep running | Incorrect overload protection is installed | Check for proper motor overload protection. Reset or replace if needed for proper value. |
| | Dust collector doors are open or not closed tight | Tighten doors securely. |
| | Hopper open to atmosphere | Install dust bin under hopper and seal the access door securely. |
| | Damper valve not adjusted properly | Check airflow in ducting for proper requirements. Adjust the damper valve until the proper airflow is achieved. Do not attempt to run without inlet ducting attached. |
| | Electrical circuit fuses | Check if the supply circuit has sufficient power to run all equipment. |
| Excessive noise/vibration of the fan  If this happens, it should be rectified at once | Dust deposit on the blades | Clean the blades. |
| | Worn blades | The fan wheel has to be replaced. |
| | Worn bearings | The bearings have to be replaced. |
| Dust emission | Filter elements installed improperly | Check that gaskets on the filter element(s) are firmly pressed to the tube sheet (the wing nuts of the filter elements should be fully tightened by hand). |
| | Filter element damage, dents in the end caps, gasket damage or holes in pleated media | Replace the filter elements. |
| | Doors not airtight | Tighten doors securely and check sealing. |

| Problem | Probable Cause | Remedy |
|---|---|--|
| Insufficient airflow | Fan wheel rotating wrong way | Check fan rotation. Refer to rotation sticker on fan housing. |
| | Openings not properly sealed | Check doors, that they are closed and tightened securely. Also check hopper area that openings are closed off and that the hopper dust disposal is installed. |
| | Outlet is restricted | Check outlet for blockage. Remove material or debris that is blocking the outlet. |
| | Filter elements plugged : | |
| | a. Lack of compressed air | Check compressed air supply for under 6 bar. |
| | b. Pulse cleaning not energized | Refer to the trouble shooting guide from the Control manual. |
| | c. Dust disposal system is too full or plugged | Clean out dust disposal system.. |
| | d. Hopper full of dust or plugged | Clean out the hopper. |
| | e. Filter elements need to be replaced | Replace the filter elements |
| | Solenoid valves/diaphragm valves are not functioning: | |
| | a. Solenoid valves/diaphragm valves are leaking compressed air | Check for debris, obstruction, valve wear or diaphragm failure by removing the diaphragm cover on the solenoid valves. Also check for solenoid leakage damage. If diaphragm valves or solenoid valves are damaged replace it or replace damaged part(s). |
| | b. Pulse control printed circuit board has failed or is out of adjustment | Refer to Operating manual of the Controls. |
| Excessive noise of a diaphragm valve | Failure on the diaphragm valve | Check for debris, obstruction, valve wear or failure by removing the diaphragm cover. If the diaphragm valve is damaged, replace it or replace damaged part(s). |

6.0 Control Panel

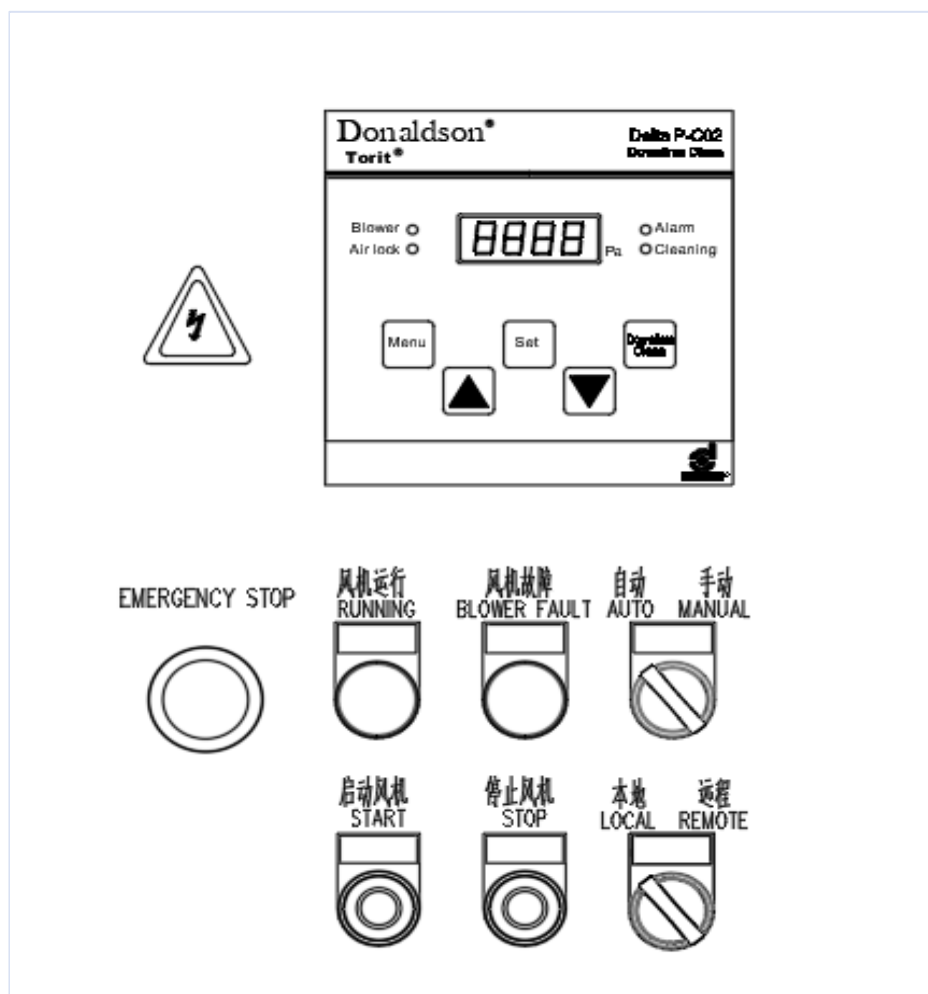


Figure 5: Control Panel

6.1 Control panel functions

The "Local/Remote" selection switch is for LOCAL or REMOTE fan motor on/off control selecting. And the control panel also provides one voltage free contact output for indication of fan motor run/stop status.

The "Auto/Manual" selection switch for AUTO or MANUAL cleaning control model selecting. When the selection switch is at the "Manual" position, the collector will clean continually. When the selection switch is at the "Auto" position, the collector cleaning will controlled by the Torit Delta P-C02 controller on the panel, and the control panel can also provide down-time cleaning.

Fan motor overload protection and overload indication (Error).

6.2 Operation

Ensure that the control panel is correctly installed onto the dust collector before starting up (check main power supply connections, all electrical cable connections, fan starter/fan motor connections, solenoid/diaphragm valve connections, compressed air tubing connections, etc.) For safety of personnel and equipment, ensure that the control panel is properly grounded.

- Turn the main power supply switch to "ON" position. The Torit Delta P-C02 controller will power up. All operating instructions for the Torit Delta P-C02 controller are mentioned in a separate manual of Delta P-C02.

- When the "Local/Remote" selection switch is set at "Remote" position, the start/stop of the fan motor can be controlled remotely. When the remote control switch is closed the "Running" green indication light will light up and the fan motor will be powered up; when the remote control switch is opened the "Running" green indication light will go off, and the fan motor dis-energized.
- When the "Local/Remote" selection switch is set at "Local" position all control operations need to be carried out locally at the control panel. The fan motor can be turn on and off by pushing the "Fan Start" and "Fan Stop" buttons respectively. When push the "Fan Start" button, the "Running" green indication light will light up and the fan motor will be powered up; when push the "Fan Stop" button the "Running" green indication light will go off and the fan motor dis-energized.
- When the "Auto/Manual" selection switch is set at "Manual" position, the cleaning will process continually. When the "Auto/Manual" selection switch is set at "Auto" position the cleaning will be controlled by the Torit Delta P-CO2 controller on the panel. At any time, the cleaning pulse is activated, the "Cleaning" indication light on the panel will light up.
- There is overload protection for the fan motor, the setting of AMPs according to the nameplate of the fan motor. When the "Error" indication light lights up it signifies that the fan motor is overloaded and has stopped.
- To terminate electrical power supply to the pulsing control, please ensure that the fan motor is shut down before turning the main power supply switch to the "OFF" position.

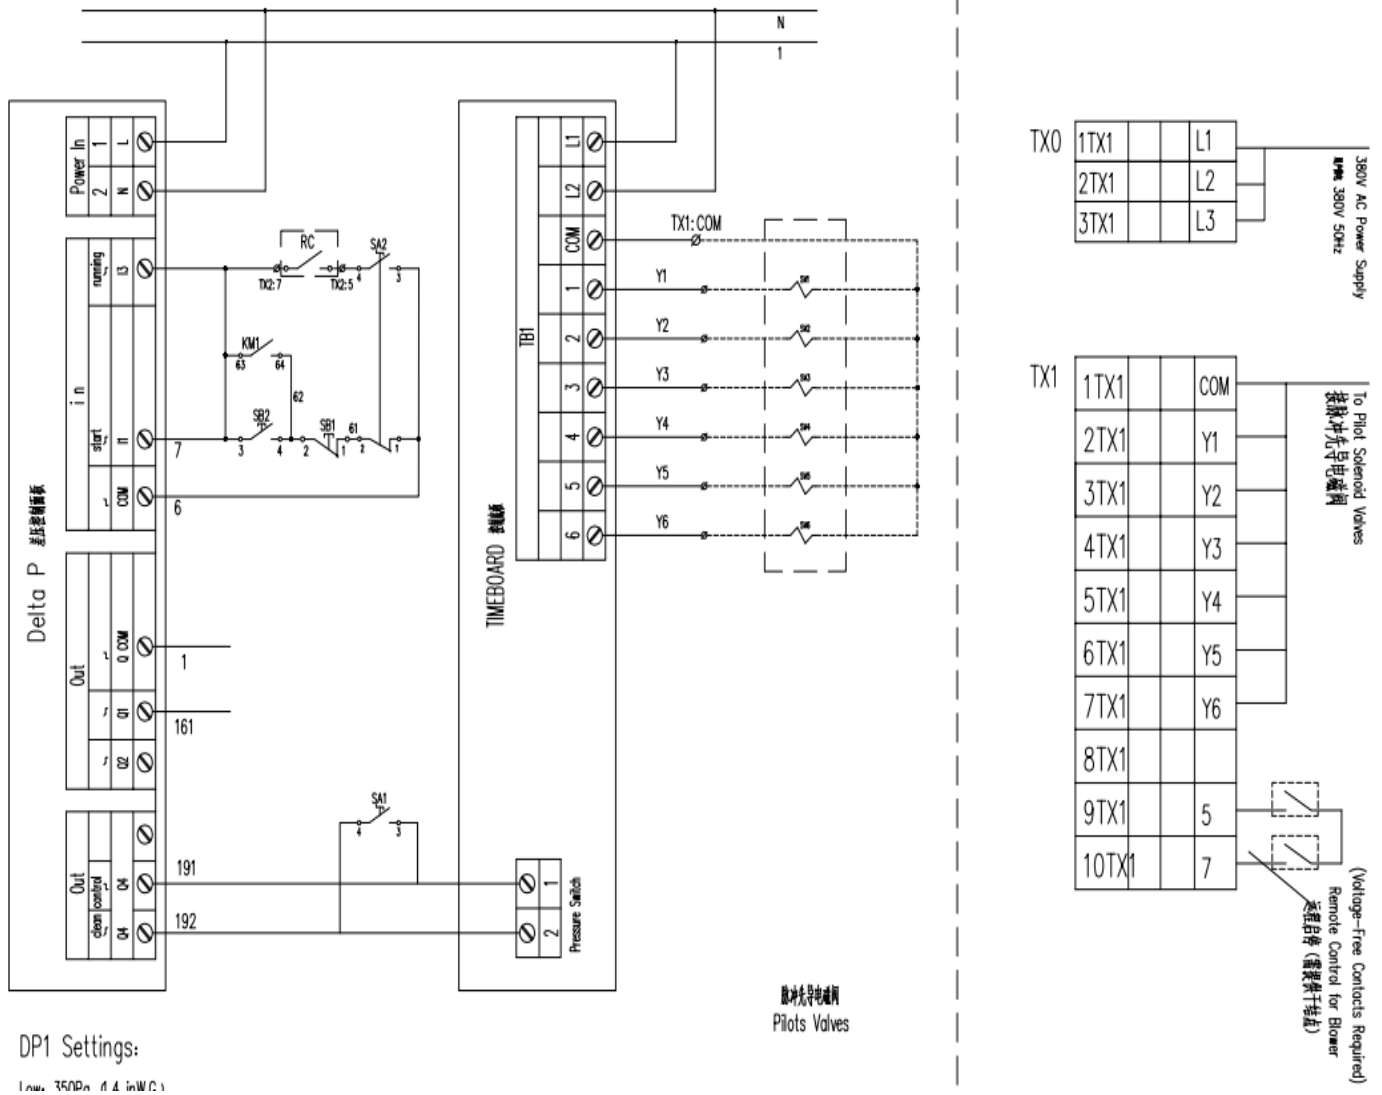


Figure 6
Electrical Terminal Block

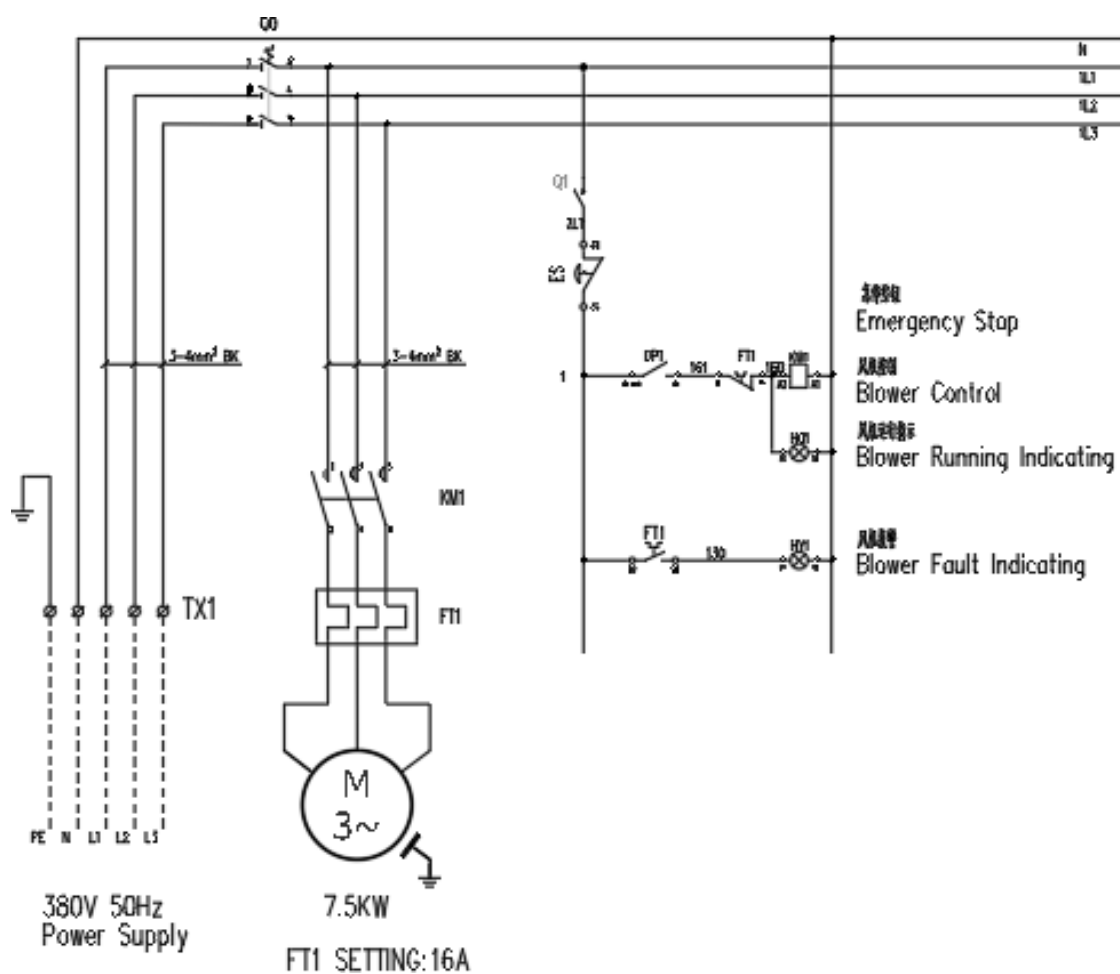


Figure 7
Wiring Diagram

7.0 Spare Parts

| Item | Description | Part number |
|------|--|-------------------|
| 1 | Filter Assembly-Ultra Web FR (MERV 13) | P282115-000-999 |
| 2 | Valve Repair Kit GOYEN K2546(1"Diaphragm Valve Repair Kit Shockwave 4000 Series) | 8PP-AG81139-01 |
| 3 | Goyen Solenoid Valve 220-Volt AC NEMA4 | 8PP-22958-00(220) |
| 4 | Access cover | 3EA-AK00267-32 |
| 5 | Access door gasket | 9RS-3*25 |
| 6 | Delta P-C02 AC220/110V, 50/60Hz | 8PP-AK01295-02 |

Note: When ordering parts, give model number and serial number of dust collector, Description, and quantity of parts desired.

Service Notes

[illegible]

The Donaldson Torit Warranty

Donaldson does not warrant against damages due to corrosion, abrasion, normal wear and tear, product modification, or product misapplication. Donaldson also makes no warranty whatsoever as to any goods manufactured or supplied by others including electric motors, fans and control components. After Donaldson has been given adequate opportunity to remedy any defects in material or workmanship, Donaldson retains the sole option to accept return of the goods, with freight paid by the purchaser, and to refund the purchase price for the goods after confirming the goods are returned undamaged and in usable condition. Such a refund will be in the full extent of Donaldson's liability. Donaldson shall not be liable for any other costs, expenses or damages whether direct, indirect, special, incidental, consequential or otherwise. The terms of this warranty may be modified only by a special warranty document signed by a Director, General Manager or Vice President of Donaldson. Failure to use genuine Donaldson replacement parts may void this warranty. THERE EXIST NO OTHER REPRESENTATIONS, WARRANTIES OR GUARANTEES EXCEPT AS STATED IN THIS PARAGRAPH AND ALL OTHER WARRANTIES INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, WHETHER EXPRESS OR IMPLIED ARE HEREBY EXPRESSLY EXCLUDED AND DISCLAIMED.



Parts and Service

For genuine Donaldson replacement filters and parts, call the Parts Express Line. For faster service, have unit's model and serial number, quantity, part number, and description available.

Donaldson Company, Inc.
Minneapolis, MN
donaldsontorit.com • shop.donaldson.com

North America
Email: donaldsontorit@donaldson.com
Phone: (USA): +1-800-365-1331 • (MX): +1-800-343-36-39

Australasia
Email: marketing.australia@donaldson.com
Phone: +61-2-4350-2000
Toll Free: (AU) +1800-345-837 • (NZ) +0800-743-387

China
Email: info.cn@donaldson.com
Phone: +86-400-820-1038

Donaldson Europe B.V.B.A.
Email: IAF-europe@donaldson.com
Phone: +32-16-38-3811

India
Email: info.difs@donaldson.com
Phone: +91-124-4807-400 • +18001035018

Japan
Email: jp-ndlifsw@donaldson.com
Phone: +81-42-540-4112

Korea
Email: iaf-kr@donaldson.com
Phone: +82-2-517-3333

Latinoamerica
Email: IndustrialAir@donaldson.com
Phone: +52-449-300-2442

South Africa
Email: SAMarketing@donaldson.com
Phone: +27-11-997-6000

Southeast Asia
Email: IAF-SEA@donaldson.com
Phone: +65-6311-7373

Donaldson Company, Inc. is the leading designer and manufacturer of dust, mist, and fume collection equipment used to control industrial-air pollutants. Our equipment is designed to help reduce occupational hazards, lengthen machine life, reduce in-plant maintenance requirements, and improve product quality.

© 2025 Donaldson Company, Inc.
Printed in APAC

IOM AK03085-01, Revision 0
Jun. 2025